



How to adjust the pressure on your RockShox Pike RC Solo Air

Use this guide to adjust the pressure in your RockShox Pike RC suspension.

Written By: Tobias Isakeit



INTRODUCTION

More information can be found on [RockShox](https://www.rockshox.com/).

Step 1 — How to adjust the pressure on your RockShox Pike RC Solo Air



- Remove the cap on the left side of the suspension fork.
- Screw your suspension pump into the designated thread.
- Go on and give your suspension fork some pressure! Consider the weight table printed on to your fork.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-11 09:13:45 AM.